Electrolux

SPARE PARTS LIST

Stick Rechargeable

0920

Item	PNC	ELC	Brand	Model	Market
A	900273372	00	Electrolux	ZB3003	HOK
A	900273383	00	Electrolux	ZB3004	HOK
A	900273385	00	Electrolux	ZB3006	HOK
A	900273387	00	Electrolux	ZB3010	HOK
A	900273389	00	Electrolux	ZB3012	HOK

SAFETY WARNING

Always turn off and unplug the machine before detaching any parts.

When servicing machines, do not remove
ANY detachable parts while the machine is powered.
The reason is internal faults may cause shorts to components
that are normally at low voltage presenting a shock hazard.


Small Appliance
Vacuum Cleaner
Stick Rechargeable

Electrolux SEA Pte.,Ltd.

Publication-No.
140625

Model	PNC
900273372	ZB3003
900273383	ZB3004
900273385	ZB3006
900273387	ZB3010
900273389	ZB3012


Ex. View Drawing Housing, Motor and Filter

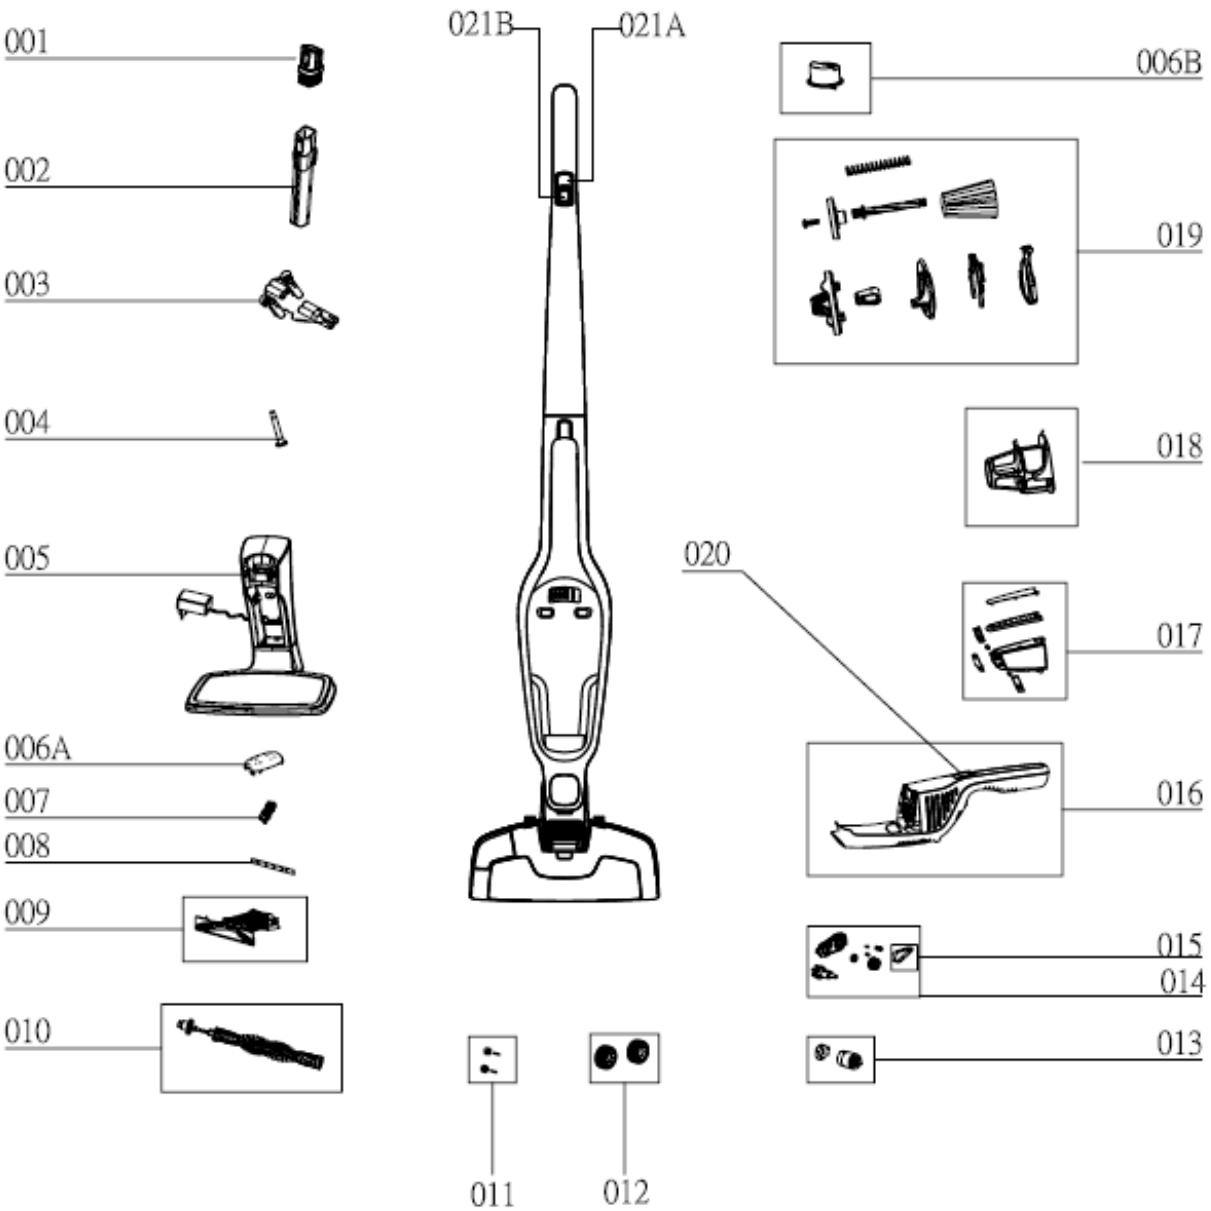


PNC	ELC	Brand	Model	Market
900273372	00	Electrolux	ZB3003	HOK
900273383	00	Electrolux	ZB3004	HOK
900273385	00	Electrolux	ZB3006	HOK
900273387	00	Electrolux	ZB3010	HOK
900273389	00	Electrolux	ZB3012	HOK


Pos.	Supplier Part No.	Part name	ZB3003 900273372 (Black 12V)	ZB3004 900273383 (White, 14.4V)	ZB3006 900273385 (Purple 14.4V)	ZB3010 900273387 (Blue 18V)	ZB3012 900273389 (Red, 18V)
001	100480640412010	Small brush nozzle	•	•	•	•	•
002	100480640361010	Crevice nozzle	•	•	•	•	•
003	988063023	Battery kit	•				
003	988064024	Battery kit		•			
003	988064024	Battery kit			•		
003	988068006	Battery kit				•	
003	988068006	Battery kit					•
004	31004065	Locking screw	•	•	•	•	•
005	988063024	Floor stand with charger	•				
005	988064025	Floor stand with charger		•	•		
005	988068029	Floor stand with charger				•	•
006A	100180630091020	Clip joint nozzle	•	•	•	•	•
006B	100780630571010	Clip joint (ring)	•	•	•	•	•
007	988063006	Roller brush cover	•	•	•	•	•
008	938063001	Led kit (Led+pcb, wiring, holder)	•	•	•	•	•
009	988063007	Hose kit	•	•	•	•	•
010	988063012	Roller brush, complete	•	•	•	•	•
011	988063009	Small wheel kit (2 pcs.)	•	•	•	•	•
012	988063011	Large wheel kit (2 pcs.)	•	•	•	•	•
013	988063004	Brush motor+PCB+Driving belt kit	•	•	•		
013	988068005	Brush motor+PCB+Driving belt kit				•	•
015	500148063010	Driving belt	•	•	•	•	•
016	988063022	Handheld unit w/o dust container	•				
016	988064023	Handheld unit w/o dust container		•			
016	988064022	Handheld unit w/o dust container			•		
016	988068030	Handheld unit w/o dust container				•	
016	988068031	Handheld unit w/o dust container					•
017	988063013	Dust container without filters	•				
017	988064006	Dust container without filters		•			
017	988064007	Dust container without filters			•		
017	988068027	Dust container without filters				•	
017	988068009	Dust container without filters					•
018	100480630101010	Outer filter	•	•	•	•	•
019	988063005	Inner filter	•	•	•	•	•
020	100180630071040	Switch cover for hand unit	•	•	•		
020	100180680071030					•	•
021A	100180630072030	Button On/Off	•	•	•	•	•
021B	100180630062030	Button Power Up/Down	•	•	•	•	•


Wiring Diagram - Handheld

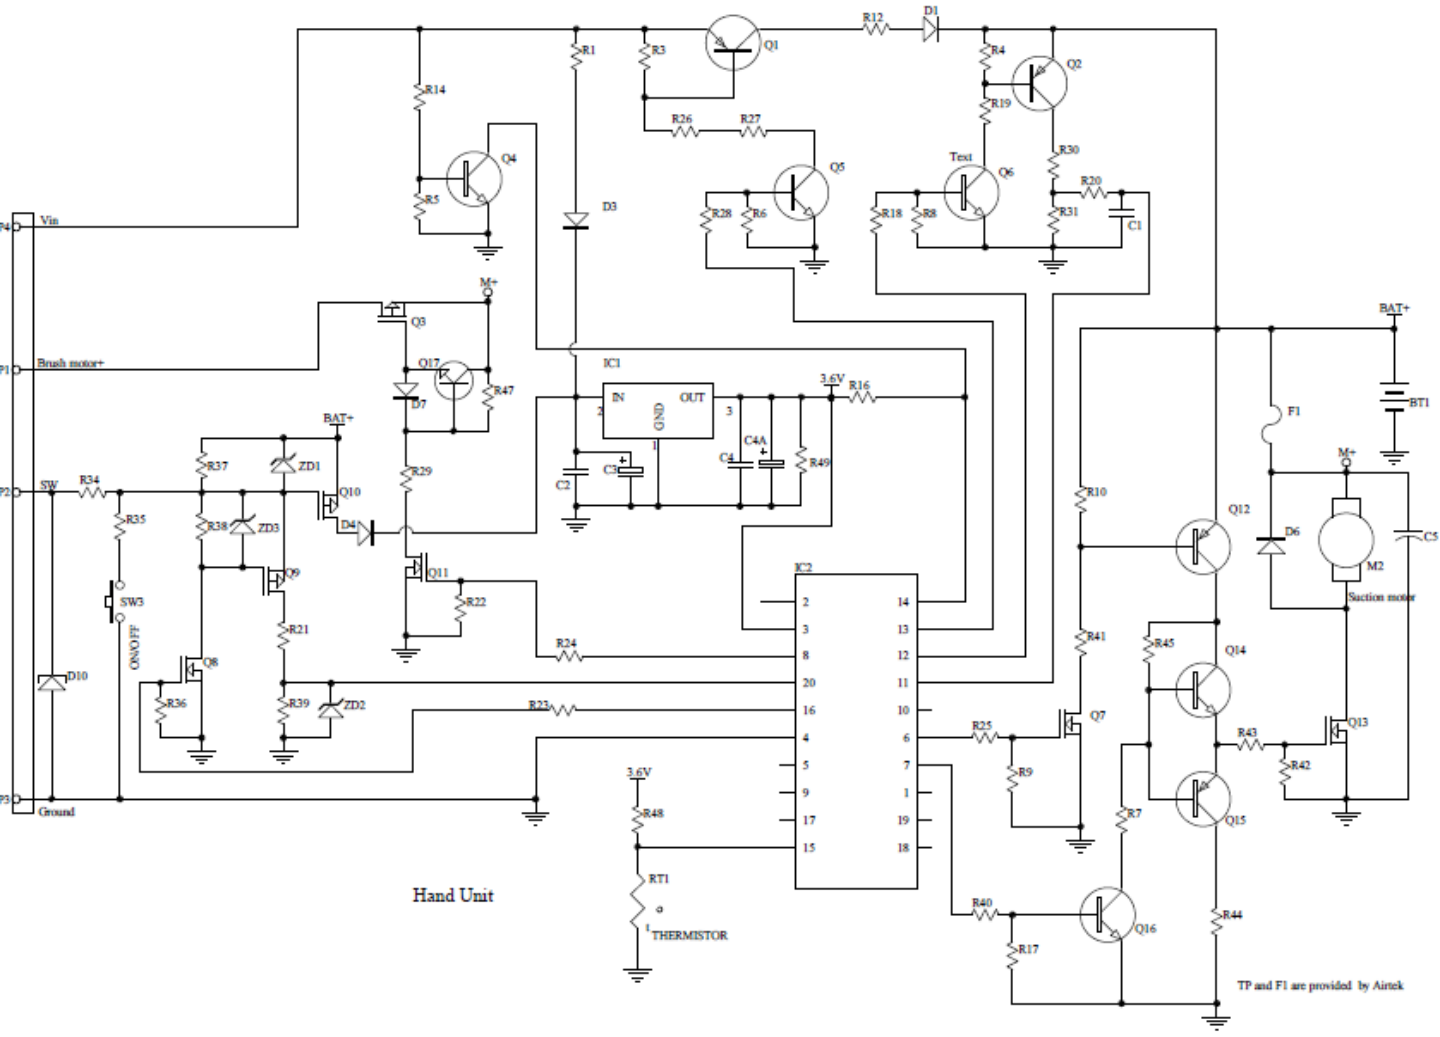

Wiring Diagram
- Nozzle LED
- On/Off Charge LED

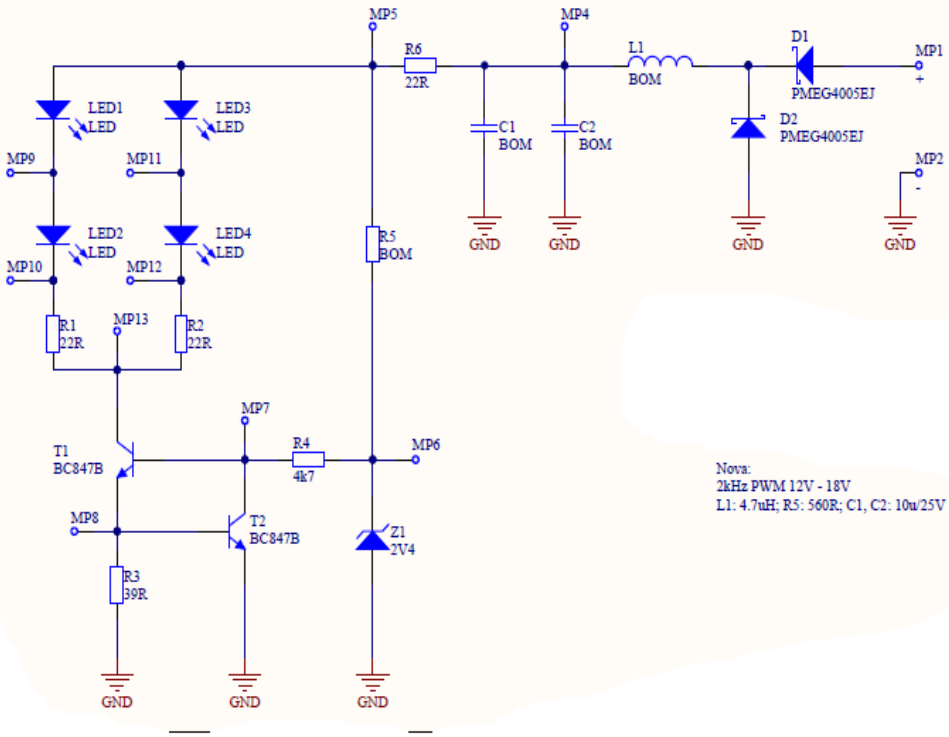

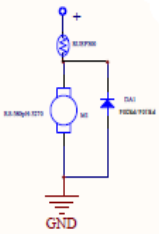

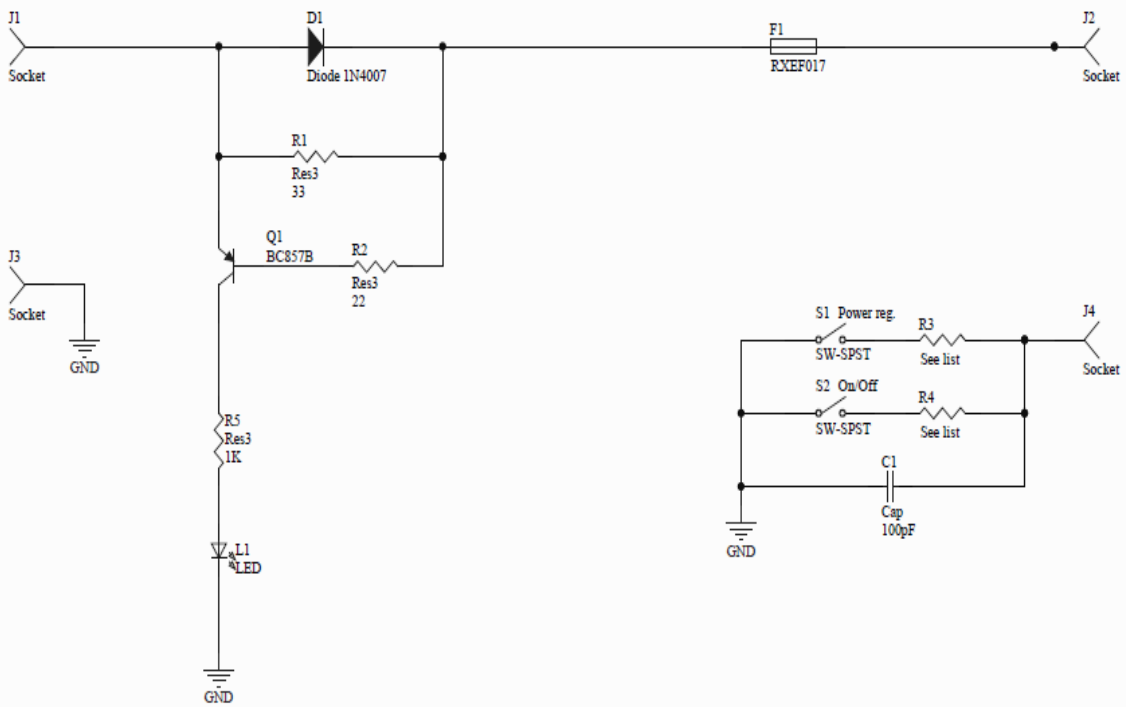

NiMH - 1183812:
On/Off - Res 4 = 2k2
Toggle level - Res 3 = 8k2

Li-Ion - 1183813:
On/Off - Res 4 = 3k9
Toggle Level - Res 3 = 10k